

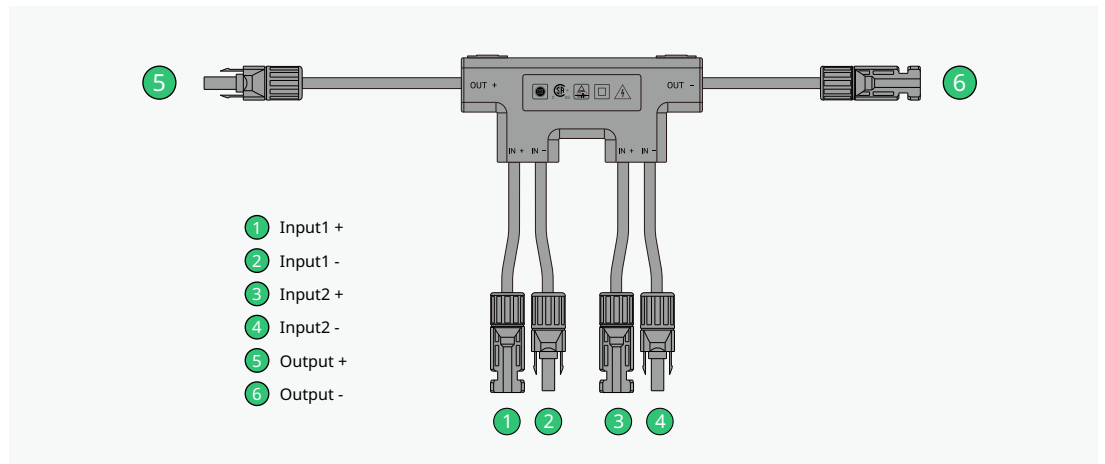


## 1. Appearance

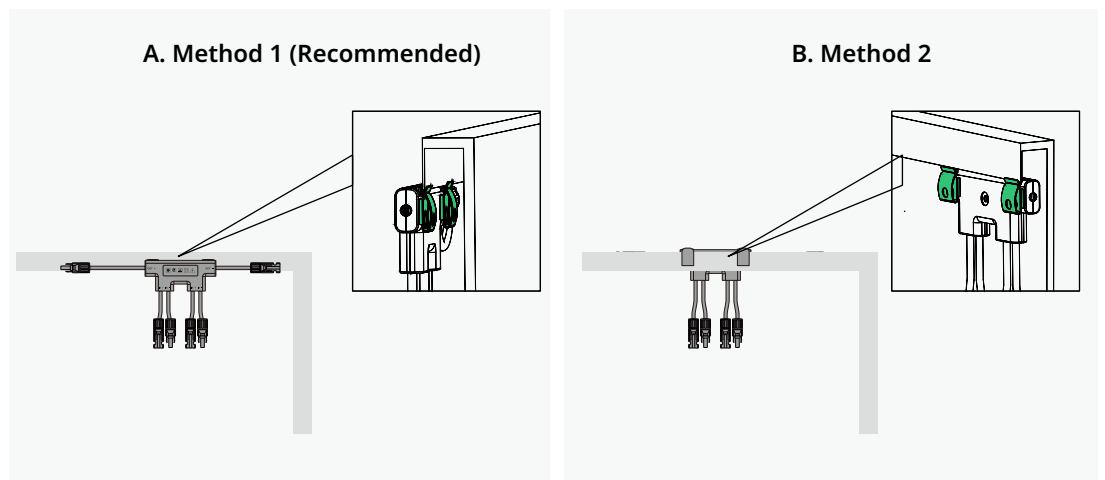



## 2. Installation

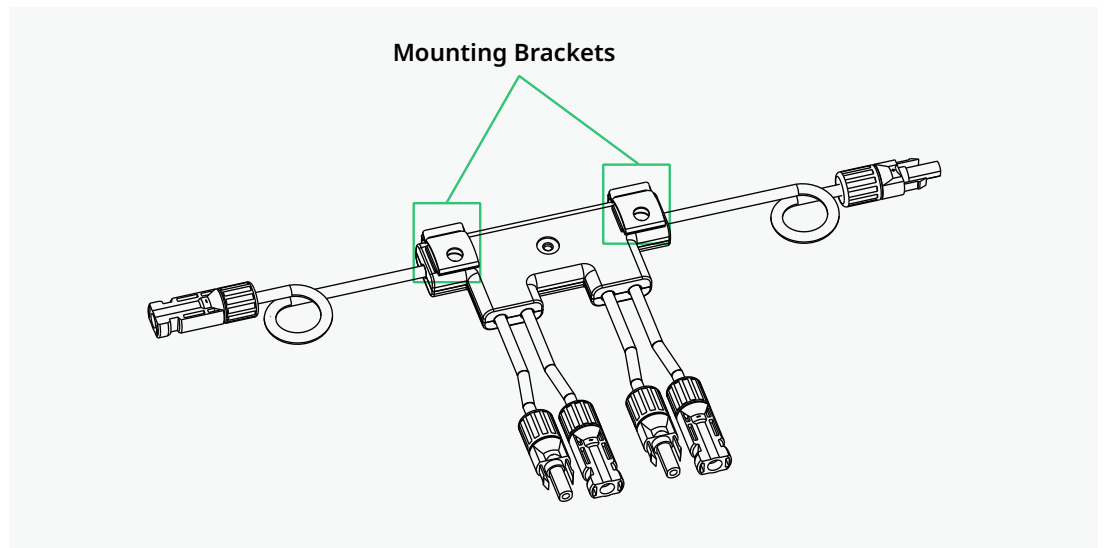


### Note:

· Allow a minimum of 1.5 cm of space between the roof and the HRSD-2C enclosure to ensure ventilation and heat dissipation.

## 3. Wiring

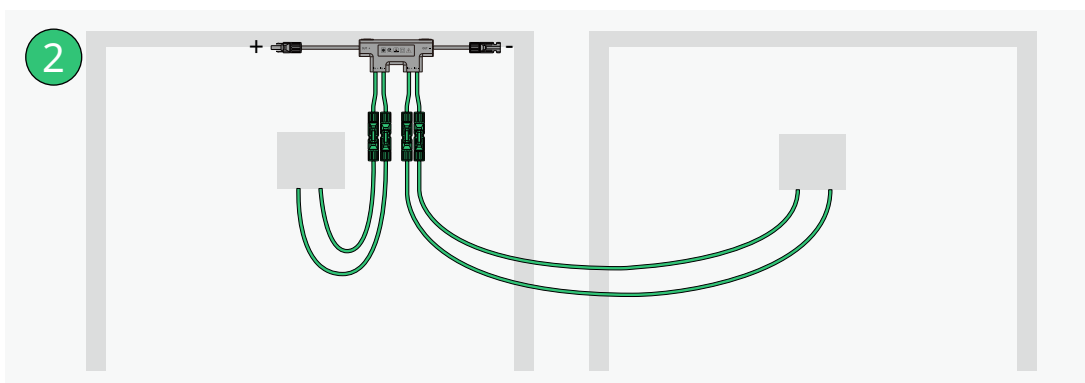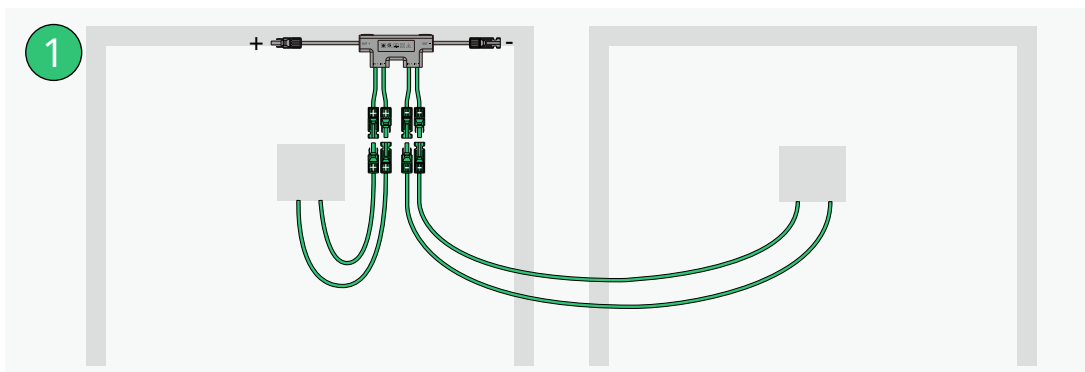

- Connect modules to HRSD inputs.

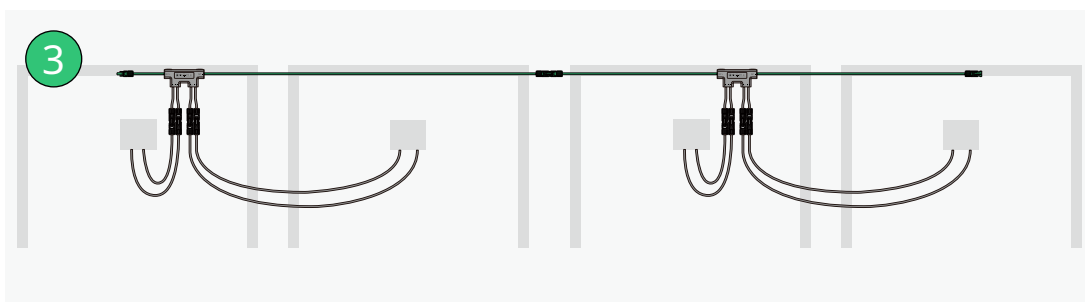

- Connect the outputs of HRSD in series.

### Note:

- When installing HRSD-2C, connect the input cables to the PV module before connecting the HRSD-2C output cables in series.
- If disconnecting HRSD-2C, disconnect the HRSD-2C output cables from the string before disconnecting the input cables from the PV module.
- If connecting HRSD-2C to a single PV module, first connect PV module to Input 1, then connect Input 2 cables together.
- Connectors from different manufacturers cannot be mated with each other.
- Transmitter must be powered off during HRSD-2C installation.
- HRSD-2C output Voltage is 0.9V to 1.1V when Transmitter "permission to operate" signal is not present.